
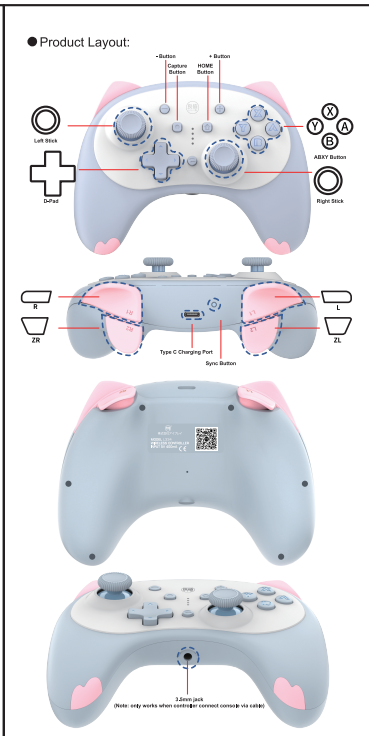


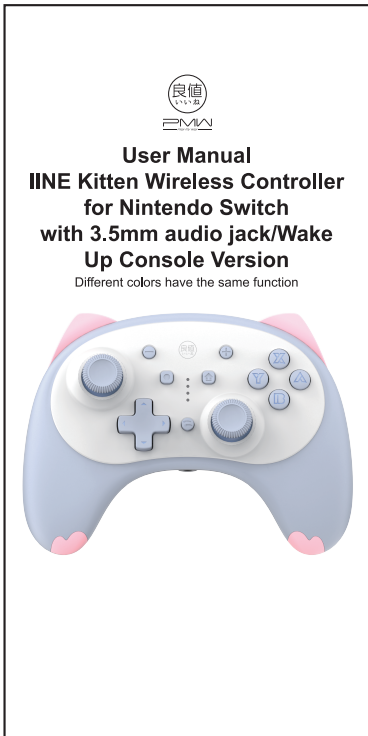

Product Features:

- 1.Product Size:127mm*95mm*52mm
- 2.Product Weight:138g±10g
- 3.Material:ABS material
- 4.Connection Method: Connect Via Bluetooth
- 5.Vibration: With double motors inside, support vibration on switch console.
- 6.Sensor: With six axes inside to make games feel in reality

Connecting Wireless Controller to a Switch Console:

Wireless Mode:

- Turn on the Switch console
- First time to connect: Press the sync button to power on controller, 4 LEDs should keep flash one by one, After connection is successful, LED should keep light.
- Reconnect: Press "PS" button for 5seconds for power on controller, 4 LEDs should keep flash one by one, After connection is successful, LED should keep light.

Note: •  is available to wake up console after first time connection successful.
All the buttons are available to wake up controller and turn into pairing mode.

Wired Mode:


You must have the "Pro Controller Wired Communication" setting turned **ON** in order to **play and charge simultaneously with ONE Wireless Controller on the Switch console.**

On the Switch console:

- **Phone:** You can only use the controller in wired mode when the Switch is in a compatible dock.
- **Connect the Switch Console into the dock and turn the console on.**
- **Plug the Type-C end of the cable into the Type-C port** located on the top of the ONE Wireless Controller.
- **Plug in the standard USB connector on the cable into one of the USB ports on the side of the Switch dock,** or the USB port located on the back of the dock.
- **Wait** until the green LEDs on the front of the controller turns on.
- **Sync the controller with the console by pressing any button** (Not the turbo button) on the controller.

Phone Note:

After you sync the controller via the charging cable, you can **control wirelessly**, by disconnect the charging cable anytime and use the controller wirelessly.

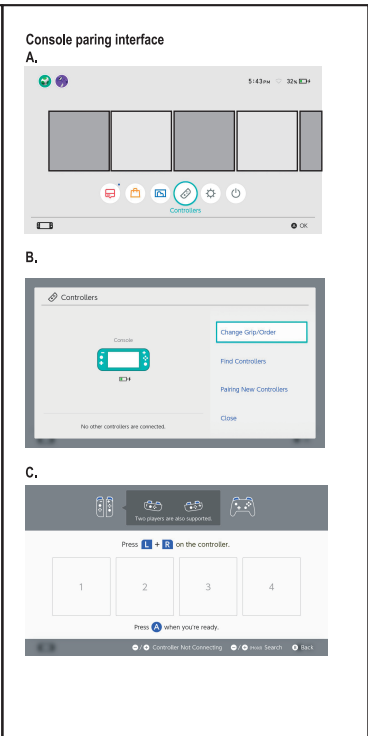

Using Turbo and Auto-Fire Functionality:

Turbo and auto-fire functionality can be set to multiple buttons at the same time. Try out different combinations and settings for different games to find the best settings for optimum gameplay.

Turbo and auto-fire is compatible with the following buttons:
Y, X, B, A, L, ZL, R, ZR.

Enabling Turbo and Auto-Fire:

- Press and hold the  button.
- While still holding the  button, press once any button(s) you wish to have turbo functionality. To set the button to auto-fire, press the button you wish to set to auto-fire once more, while still holding the  button.
- When you are finished with your settings, let go of the  button.

Disabling Turbo and Auto-Fire for a Specific Button:

- Press turbo, press and hold the  button, then press the turbo enabled button(s) twice.
- Turn off auto-fire-press the auto-fire enabled button(s) once while holding the  button.

Adjust Strength of Vibration

Hold turbo button.

Move left joystick up to strengthen vibration

Move left joystick down to weaken vibration

When adjustment finished, release all buttons.

Turn off vibration function of controller:

If need to turn off vibration function:

- 1) Press "System settings"
- 2) Then press "Controllers and Sensors" → "Controller Vibration" → "Turn off"

Charging:

Charging display: During in charging the 4 led lights will keep flashing.

The 4 lights should keep light after charging in the power on state.

The 4 lights will be off after charging in the off state.



NOTE: Please note power input should be 5V1A, DO NOT use fast charger or high power chargers including Switch original charger.

Reset Game Controller:

Hold sync button for 3 to 5 seconds, controller should reset and try to connect to console automatically.

Calibrate control sticks

1. Press the Home button to return to the host interface and select system settings
2. Press A to enter the following interface, select "calibrate control sticks"
3. Press A to enter the following interface
4. Press the rocker (left rocker/right rocker) to be calibrated to enter the following interface for calibration

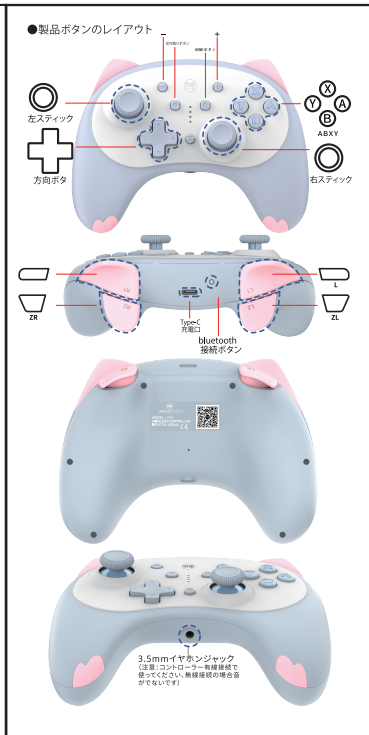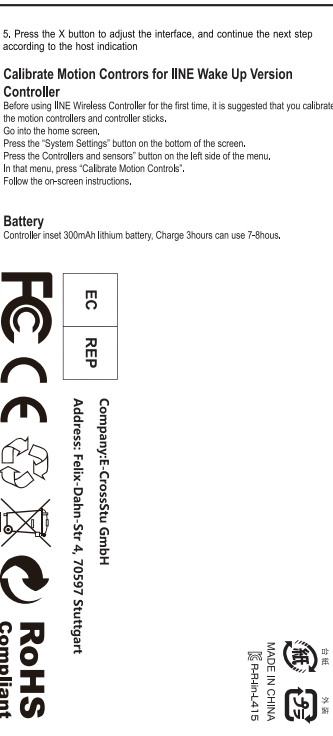

●商品の特長:

1. サイズ: 127X95X52mm、アジア人手形専用設計
2. 商品重量: 138g±10g
3. 材質: 新斬ABS環境保護材料
4. 接続方法: Bluetooth接続 (Bluetoothバージョン: 2.1)
5. 振動: ダブルモーター、強力な振動モード
6. ジャイロスコープを6個組み、クールなゲーム体験できる
7. 連射モード、自動連射と連射モードのクリア機能あり

●Switch本体接続方法:

注意: 接続前に電源をONにし、Switch本体のシステムとコントローラを最新のバージョンに更新してご使用ください。

【初回使用】

- ①Switch本体の電源を入れ、起動して下さい。
- ②HOME→コントローラ → 持ち方/順番を変えるを押して、コントローラ接続画面に入ります。


①本製品→裏側のボタンを1秒以上を押して、四つのLEDが点滅したら手を放してください、Switch本体とコントローラー接続が開始されます。

- ③Bluetooth接続完了すると、LEDランプが点灯します

【二回目以降の使用時】

- ①本製品のHOMEボタンを1秒以上押して、LEDランプが点滅したら手を放してください、接続が開始します。
- ②Bluetooth接続完了すると、LEDランプが点灯します。

※HOMEボタンでSwitchのスリープを解除することができます

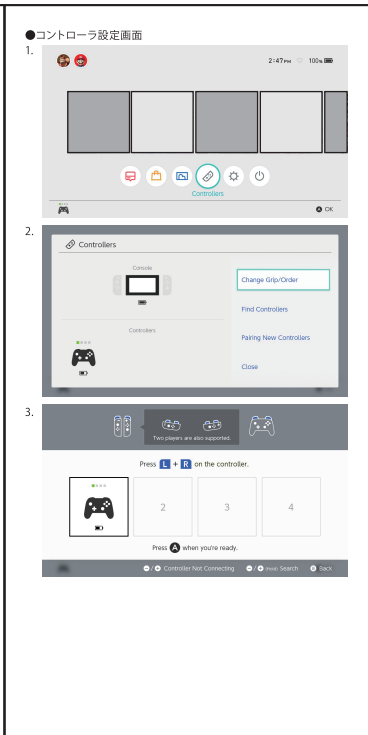

●スティック校正

1. ボムキーを押してホストメインインターフェイスに戻る、システム設置を選択。

2. Aボタンを押して次のインターフェイスに入り、「calibrate controller sticks」を選択します

3. Aボタンを押して下記のインターフェイスに入る

4. ジョイスティック（左のジョイスティック/右ジョイスティック）を押して校正すると、次の校正用のインターフェイスに入ります

5.Xボタンを押して、画面を調整します。それにホストの指示より次の操作を行います。



●ジャイロセンサー（シャフトの過剰使用を保証するために、この動作は初回接続後にお勧め）Aシャットダウン状態に“左”Bボタンを押して、最後にホームボタンを押し、LED1、LED2とLED3、LED4が低減し、調整失敗に入ります。本製品をデスクまたは他の平坦な位置に置き、“右”Cボタンを押します。“右”Cボタン本体が自動的に照整し、本製品が自動的に本体と統合します。



C. 完了後に改めて本製品の調整画面に入り、使用操作を確認します

D. Switcher本体は自動的に照正し、下記画面に“OK”をクリックして、完成になります



- **自動スリープ**
 - ① ホスト画面が閉じると、コントローラが自動的にスリープモードになる
 - ② 5分以内ボタンを押さなければ自動的にスリープモードになる。
[センサーもたない]
 - ③ Bluetoothモードで、HOMEボタンを5秒押しすると、ホストの接続と切れます。
- **充電表示**
 - ① コントローラ電源OFFで充電場合、四つLEDランプが点滅します。フルの状態になりましたらLEDランプが消じます。
 - ② コントローラで遊びながら充電する場合、LEDランプが点滅します。フルの状態になりましたらLEDランプ点滅が停止する。
- **低電圧アラーム**
 - ① コントローラ電圧3.6±0.1vより低ければ、LEDランプが点滅3回。
 - ② コントローラ電圧3.3±0.1vより低ければ、自動スリープモードになります。
- **連射と自動連射 (Turbo Ⅱ)**

SWITCH本体を接続時にこのモードでも使用可能

 - ① A/B/X/Y/L1/L2/R1/R2の中一つボタンを選んで押しながら **Ⅱ** ボタンを押すと連射機能がプラスされます。
 - ② 連射ボタンを押しながら **Ⅱ** ボタンを押すと自動的に連射します
 - ③ 連射ボタンを押しながら **Ⅱ** ボタンをプラスすると、単一ボタンの連射機能が消えます。(①②③が繰り返し返す)
- **強制振動調整**

強くなる:turboボタン押しなら、左スティックを上方方向に移動。
弱くなる:turboボタン押しなら、左スティックを下方方向に移動。
- **リセット方法:**接続ボタンを5秒くらい押し続けてください

--